


PIT COVER SEAL BREAKER


Instructions

1

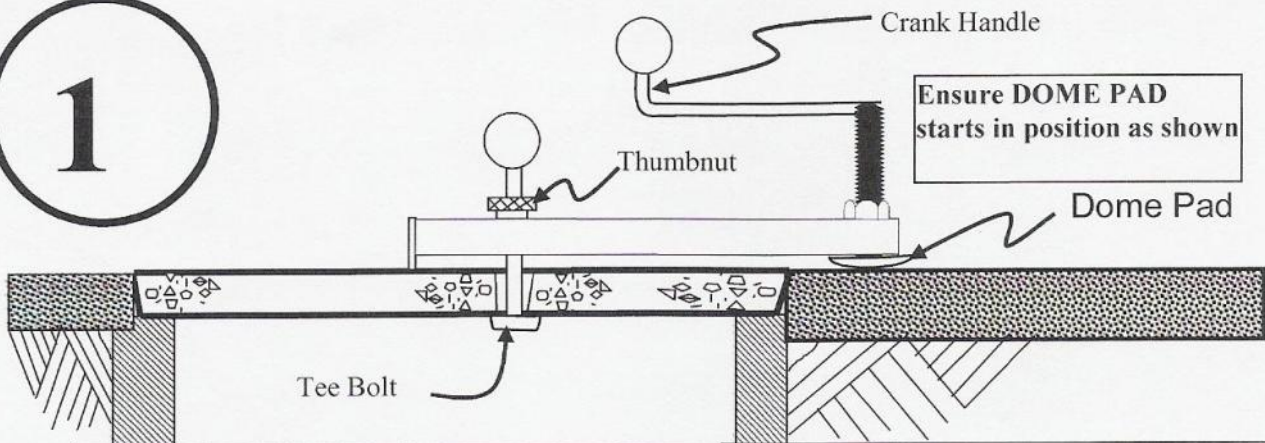

- Position the Seal Breaker across the pit cover & insert the Tee Bolt into the cover key hole slot & turn to engage the Tee at right angles under the slot.
- Tighten the thumbnut to its maximum travel & make sure that the Tee Bolt is still engaged under the slot.
- **Ensure DOME PAD starts with full thread retracted as shown.**

2

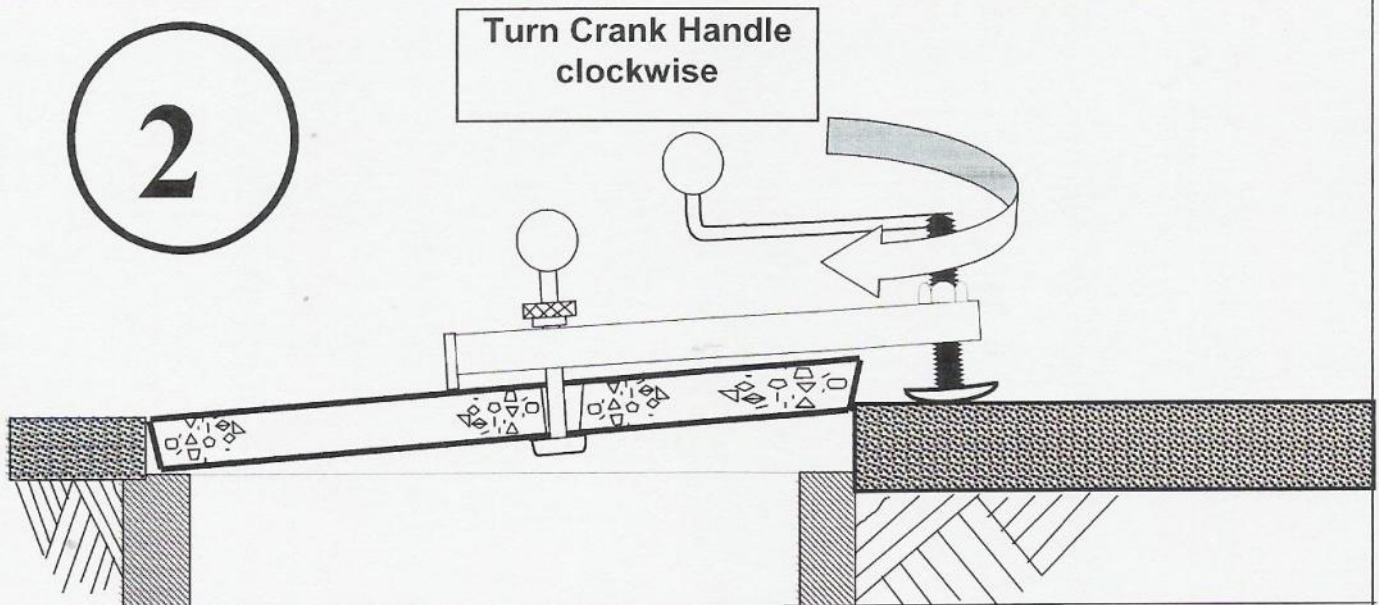

- To break the seal turn the crack handle clock wise to apply an upward force. If movement is not enough, the thumbnut may need to be tightened further or a piece of timber or similar plate may be placed under the domed pad.
- Having broken the seal of the cover a standard manhole key should be used to remove the cover.

